

MINI LIGHTHEAD Manual


Surface Mount

To + VDC (fuse @ 1A):**RED**

To Chassis Ground:**BLACK**

For Synchronization:**YELLOW**

Connect **YELLOW** wires of all heads together for synchronization
(All heads must be set at the same pattern)

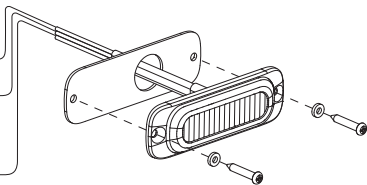

For Simultaneous or Alternating Flash:

1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping mode; lighthouse will display short (single or double) flashes:
 - Single flash = Group1
 - Double flash = Group2
2. Remove **YELLOW** wire from +VDC and momentarily apply to +VDC to change Groups:
 - Heads in the same Group flash together.
 - Group1 Heads alternate with Group2 Heads.

For Flash Pattern, momentarily apply +VDC to **YELLOW** wire:

- once for next pattern
- quickly three times for reset to FP#1 (see flash pattern chart)

NOTE: This unit may not be factory set at Flash Pattern 1.

FP#		Flash Patterns	
1	Random	7	Quad
2	Steady	8	Quint
3	Single	9	8 Flash
4	Mega	10	Single-Quad
5	Double	11	Single H/L
6	Triple	12	Single-Triple-Quint