

ALL SWS SNOW PLOW PACKAGES NOW COME WITH



One clock for the whole plow train

LinQ uses GPS time to keep equipped trucks on the same flash frame with no truck-to-truck radio, no vehicle pairing, and no fleet setup.




Change one part. The whole train agrees.

Warning lights should guide, not distract.

LinQ synchronizes every plow in the train to flash in unity, creating one clear, coordinated warning signal.

HOW IT WORKS

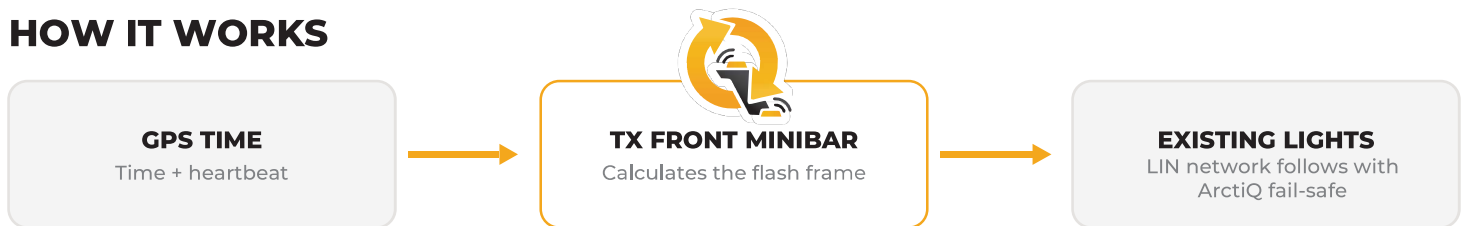

WHAT CREWS GET

1 Upgrade one part only

On trucks already uplifted with an SWS snow plow package, replace the front TX minibar only. Same truck. Same wiring. Same lights.

2 Power it and go

Nothing to commission. No pairing. No yard setup. The truck agrees as soon as it is powered.

3 No master truck

Any truck can lead or leave the convoy. The fleet depends on none.

4 No ongoing fees or fleet limits

No licence, subscription, base station, airtime, or annual fee. Three trucks or thirty, each reaches the same answer on its own.

FOR YOUR ENTIRE FLEET